 




# Dell Inspiron E1405 RAM Replacement

This guide will help you replace the RAM in a Dell Inspiron 1305.

Written By: Sarah Neal Secrest

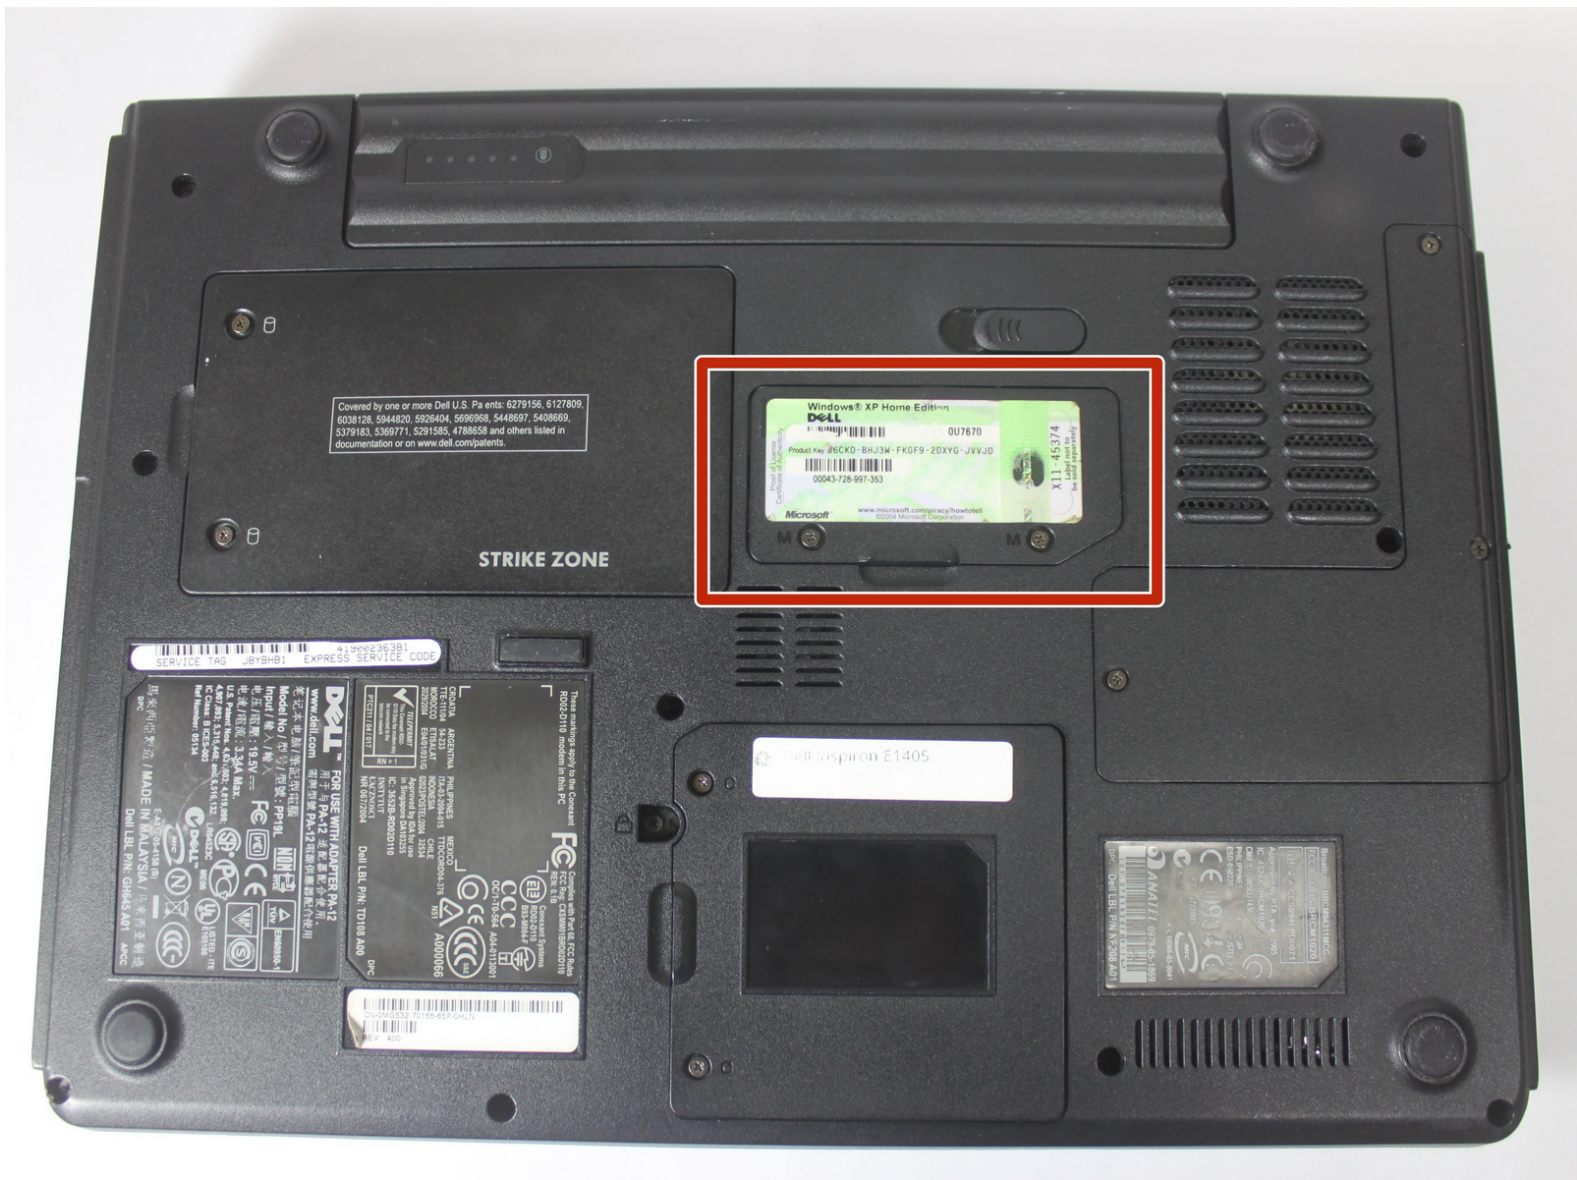

## INTRODUCTION

Use this guide to help you replace the RAM in a Dell Inspiron 1305.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery



⚠ Save your work, power the laptop off, and ensure that the charging cable is unplugged before removing the battery.

- Flip the laptop over.
- Locate the battery release switch on the bottom of the laptop.

## Step 2



- Slide the battery release switch away from the lock symbol until you hear the battery click.
- Slide the battery towards the back of the laptop until it comes free.



## Step 3 — RAM



 
- Locate the RAM access door.
- Remove the two 5.5mm screws securing the RAM access door with a #00 Phillips screwdriver.

## Step 4



- Using your fingers, open and remove the access door from the laptop, exposing the RAM underneath.

## Step 5

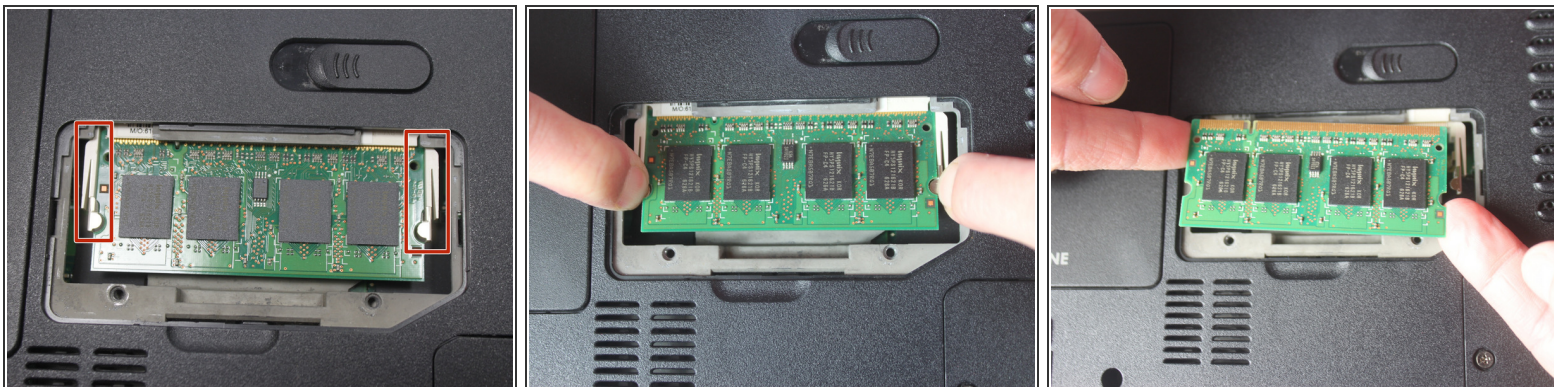

- To access the RAM, push out the latches outward on the left and right of the RAM.
- To remove the memory card, pull it out of the tray with the latches still stretched out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-10 11:31:24 PM.